



UK's best selling phone brand

User Guide



BT Decor 2100

Corded Phone

Getting to know your ph

Quickdial memory card

Use to make a note of your quickdial memory numbers.


Quick dial

Use to store one-touch and quickdial telephone numbers in the memory and to dial quickdial memory numbers.

Mute (with LED indicator)

During a call, mutes your voice so your caller cannot hear you.


The red LED illuminates when the mute function is on and flashes when storing a number in the one-touch or quickdial memory.

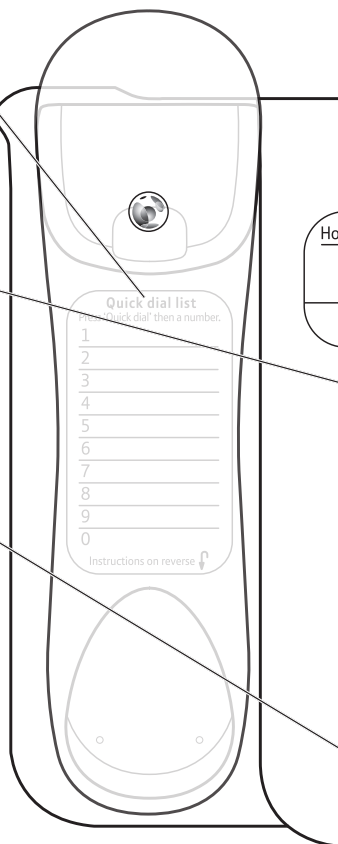

phone

One-touch memory buttons

Use to store and dial your one-touch memory numbers.

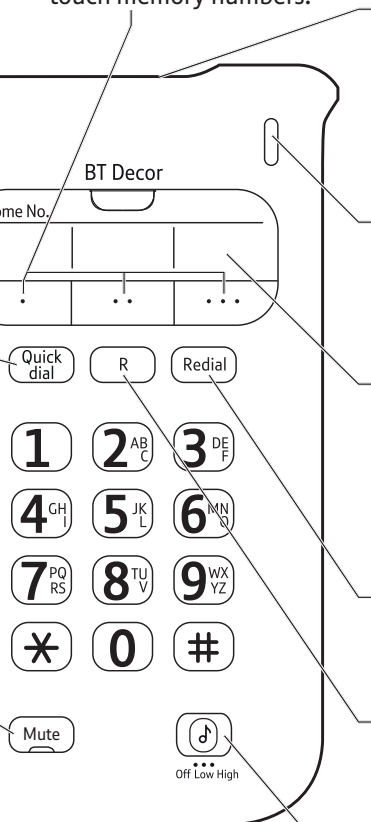

Ringer tone switch (located on back of base)

Use to set the ringer tone: R1, R2 or R3.

Incoming call LED indicator

Red LED flashes to indicate an incoming call.

One-touch memory card

Use to make a note of your 3 one-touch memory numbers.

Redial

Press to redial the last number called.

R (Recall)

Used with switchboard services and certain BT Calling Features.

Ringer volume switch

Use to select the ringer volume: High, Low or Off.

Using the phone

Make a call

1. Lift the handset and wait for the dial tone.
2. Enter the telephone number.

End a call

1. Replace the handset on the base.

Receive a call

1. When you receive a call, the telephone rings and the red incoming call LED will flash. Simply pick up the handset to answer the call.

Last number redial

1. Lift the handset and press the **Redial** button. The last number called will be redialled.



Note: a redial number can only be 32 digits long. If the last number redialled was longer than 32 digits only the first 32 digits will be dialled out.

Mute

1. During a call, press and release the **Mute** button to mute the handset microphone. The red LED on the mute button will illuminate to indicate that the mute feature is on. Your caller now cannot hear you speak.
2. To switch mute off, press and release the **Mute** button again. The red LED will turn off and your caller will now be able to hear you.

